




TAG Playfield Hanger Bracket upgrade
(originals can break in transit when machine is shipped on its end)

- (1) Unscrew and remove the blue apron**
- (2) Put the playfield onto the PF prop.**

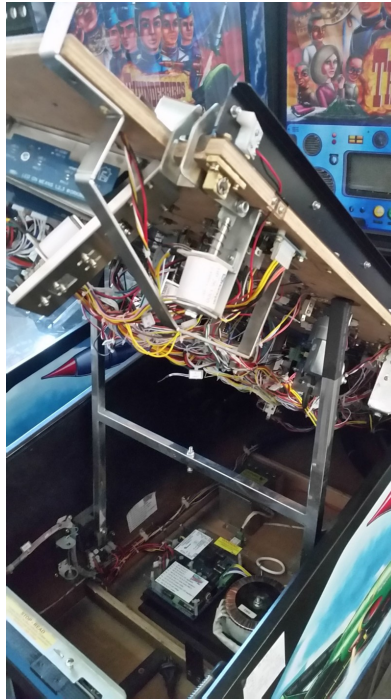

- (3) Remove the three screws holding each bracket to the playfield.**



(4) Slide the replacement brackets onto the front edge of the playfield and refit the three screws. Refit the blue apron.



Download this instruction sheet in colour at:
www.homepin.com/kits/PF_Hanger_Bracket_Upgrade.pdf

© Homepin Ltd (HK)

--ooOOoo--